


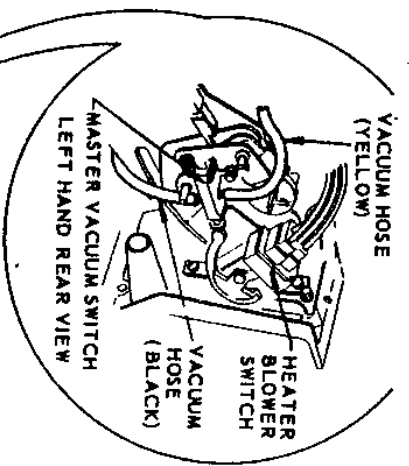

- VACUUM HOSE (YELLOW)
- VACUUM HOSE CONNECTOR PLUG
- 4 - GREEN
- 3 - BLACK
- 7 - YELLOW
- 2 - WHITE
- 1 - BLACK

INSTRUMENT PANEL CONTROL ASSEMBLY

VACUUM HOSE (WHITE)

VACUUM HOSE (WHITE) (V-6 ONLY)

THROTTLE ADVANCE VACUUM SWITCH (V-6 ONLY)

VACUUM HOSE CONNECTOR PLUG

OUTSIDE AIR INLET DOOR DIAPHRAGM

RECIRCULATED AIR VACUUM HOSE (WHITE)

WATER VALVE VACUUM HOSE (YELLOW)

GROMMET

THROTTLE ADVANCE VACUUM HOSE (BLUE)

VACUUM SOURCE (BLACK)

NOTE: VACUUM LINES MUST BE KEPT UNDER DEPENDENT PRESSURE TO PREVENT AIR FLOW AND MUST BE FREE OF DEFROSTER CONTROL CABLE TO NOT WEAR, PINCH OR BE CUT.

AIR CONDITIONER HEATER ASSEMBLY

PLENUM BLOWER AND AIR DOOR ASSEMBLY